

Post installation settings for TDFM-136B

Note: these settings have been optimized for high noise environment aircraft

1. All supervisor settings are found in Level 5. See the Operating Instructions manual.
2. Level settings here require a password found on page 68 of the Operating Instructions manual.
3. The following settings are available:
4.
 - A. Backlight Input
 - B. Radio Mic Input level
 - C. RF Module Output level
 - D. RF Module microphone input levels.

Radio Microphone Input Gain	Default	Best Signal to Noise Setting		
Mic Gain	125	32	Page 56	
RF Module Output Level				
Main Output Volume	200	Leave at Default	Page 56 & 57	
Guard Output Volume	200	Leave at Default	Page 56 & 57	
RF Radio Module Input				
Main Mic Input	40	50	Page 57	
Guard Mic Input	40	50	Page 57	

After levels are set, review side tone audio output level. You may have to adjust these up or down for proper levels in pilot headsets.

When finished, proceed to level 1 and then hold on/off switch until settings are saved.